

NF17-4

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP RAILS FOLLOWING THE LABELS
2. CONNECT SIDE RAILS
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS


BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:


1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER
3. CLOSE ALL ZIPPERS
4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG

Frame parts

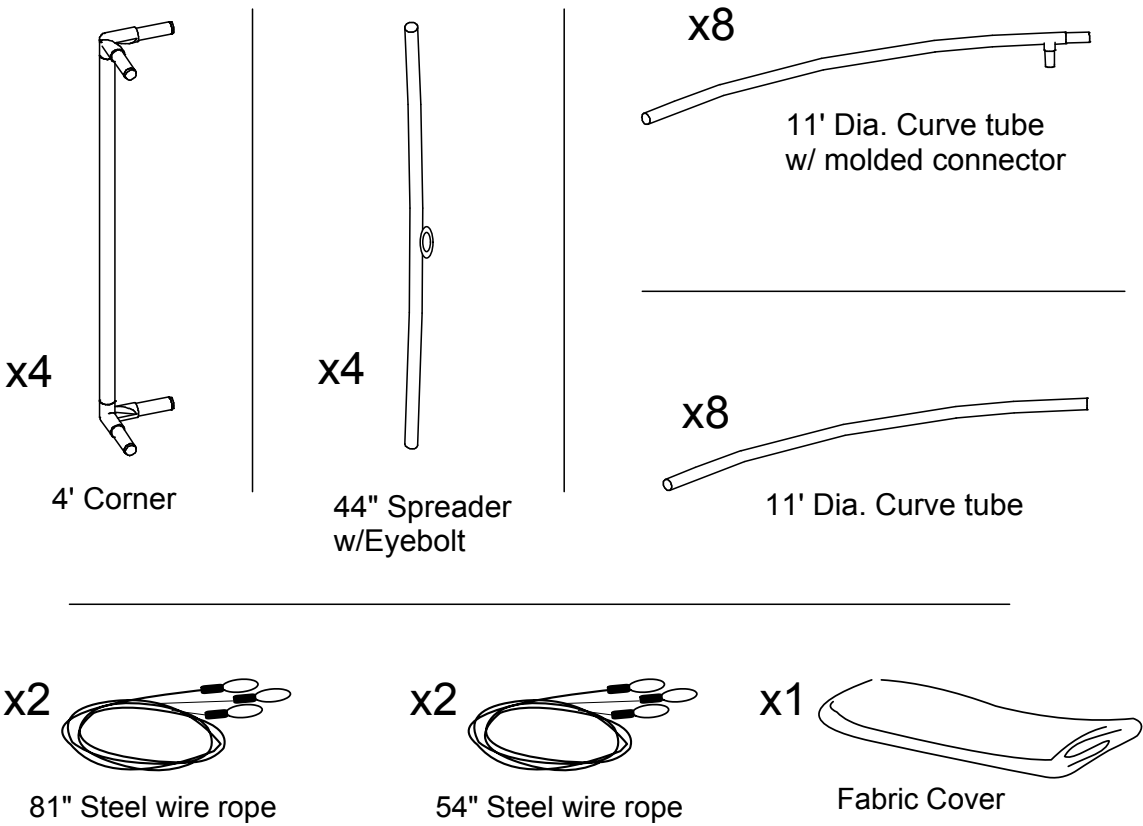

Frame Assembly

Assemble frame as shown

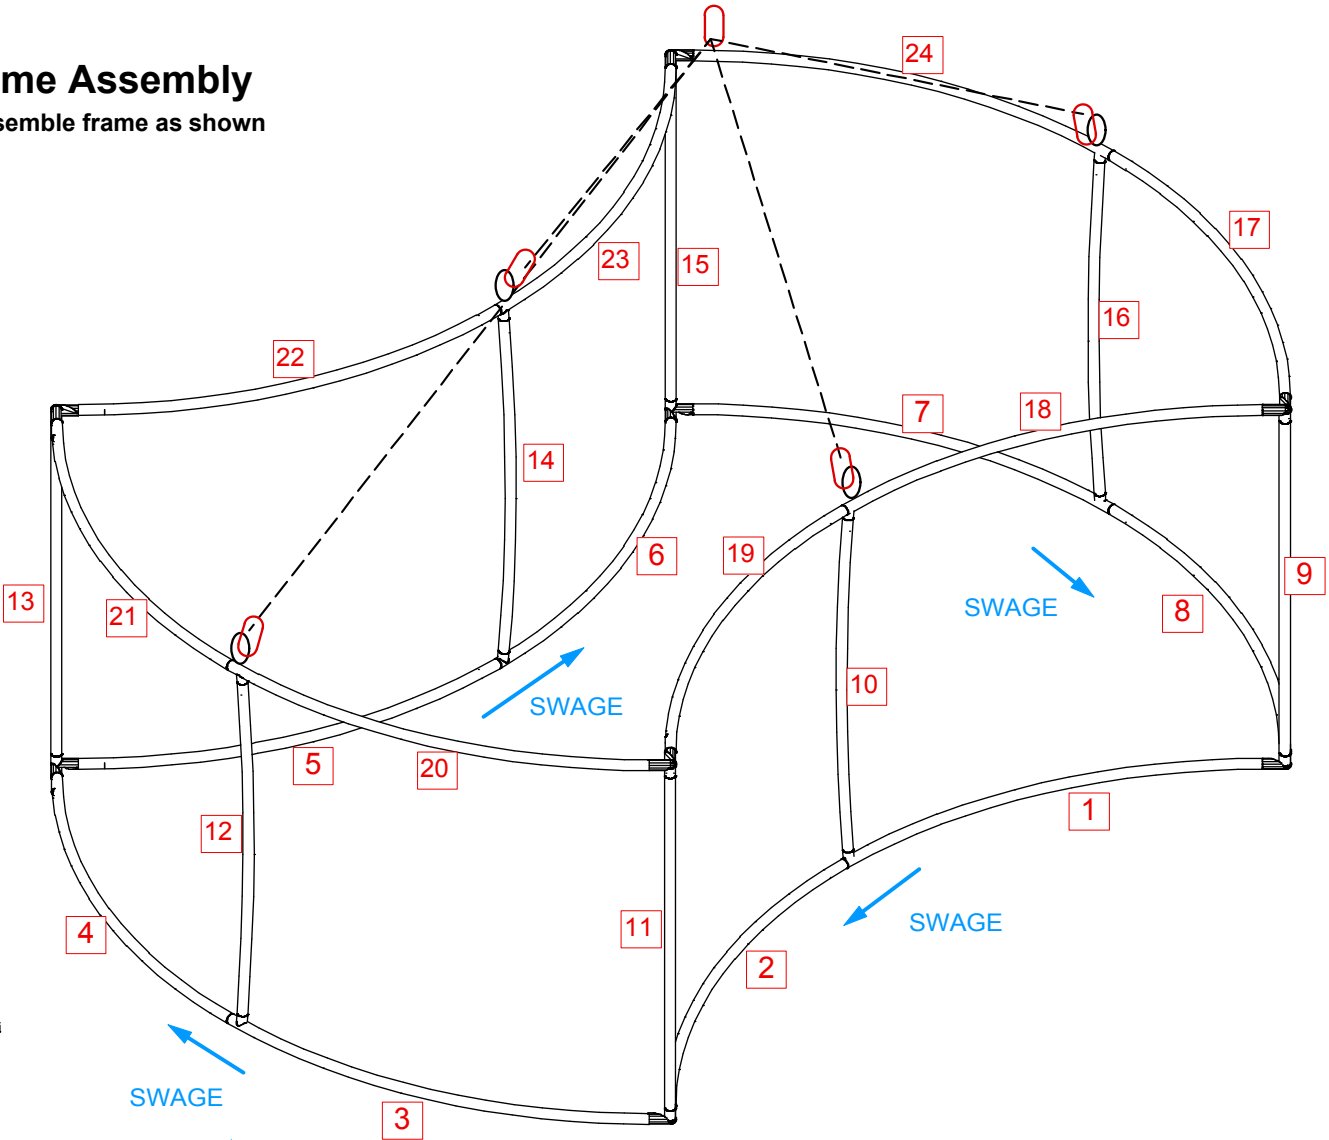


Fabric Cover (Panel A)

GRAPHIC SIZE: 107 1/2" x 48"(V)

Fabric: 4417 (2) Panels

Add a 2" bleed on all sides

PILLOWCASE CONSTRUCTION

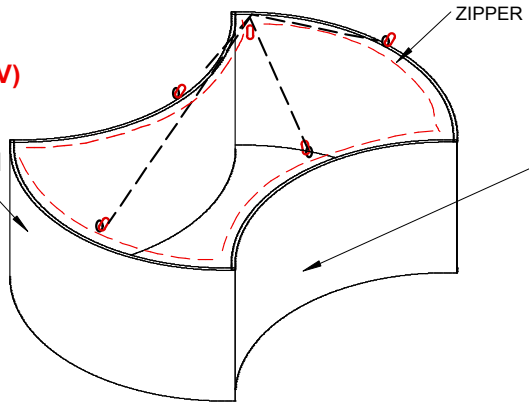

Fabric Cover (Panel B)

GRAPHIC SIZE: 105 1/2" x 48"(V)

Fabric: 4417 (2) Panels

Add a 2" bleed on all sides

PILLOWCASE CONSTRUCTION