

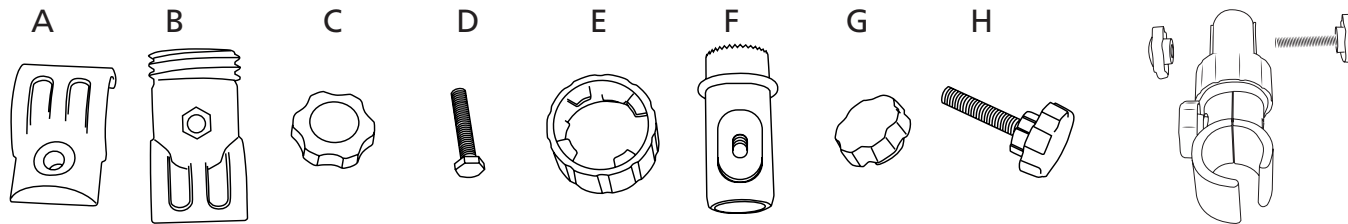
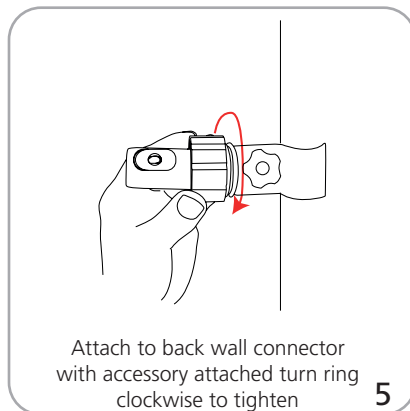
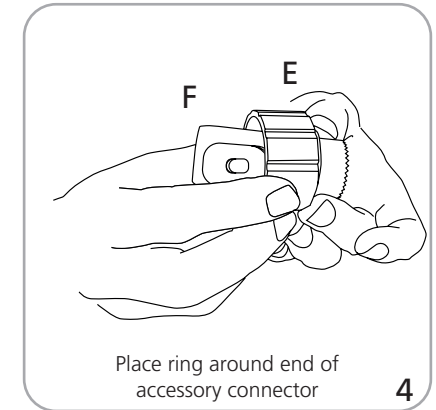
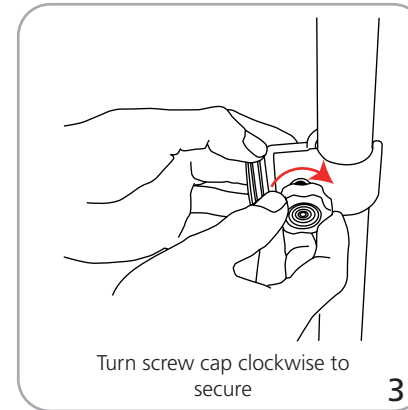


# Formulate Universal Clamp

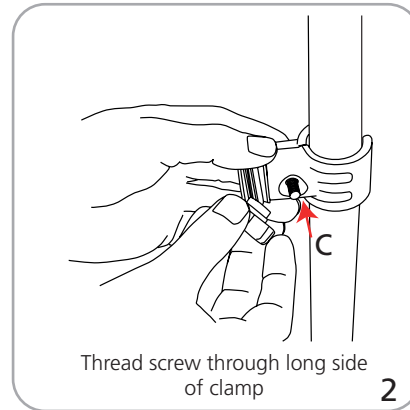


## Backwall Connection

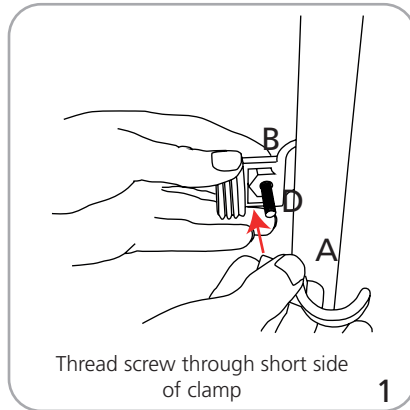

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.


# Accessory Attachment

## VESA Universal Bracket

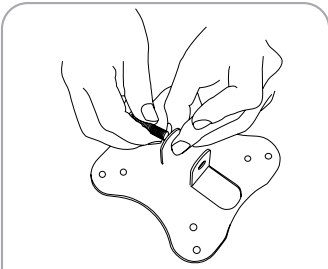


Begin threading screw through VESA bracket

1

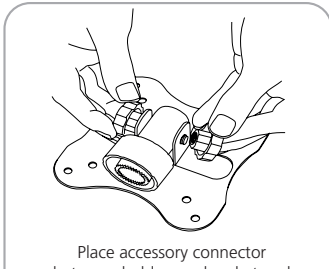


Place accessory connector between holders on bracket and thread screw all the way through to opposite side

2

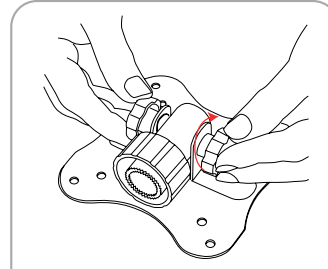


Turn screw cap clockwise to secure

3

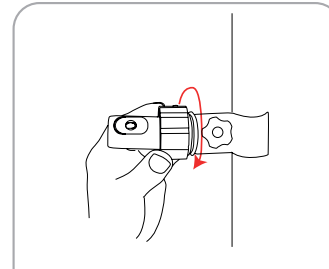

Attach to back wall connector with accessory attached turn ring clockwise to tighten


4

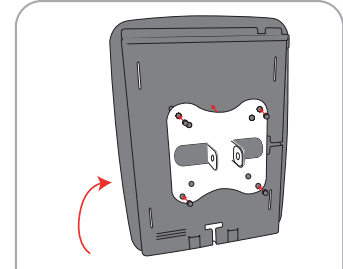

Attach iPad holder using screws provided with holder


5

## Literature Universal Bracket

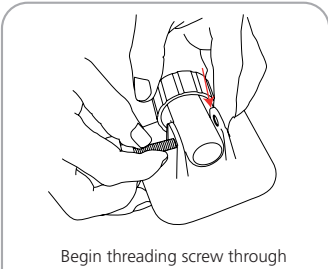


Begin threading screw through literature holder bracket and place accessory connector between holders on bracket

1

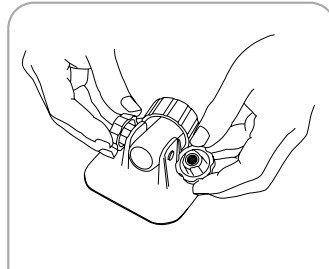


Thread screw all the way through to opposite side

2

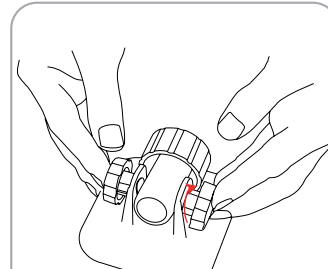


Turn screw cap clockwise to secure

3

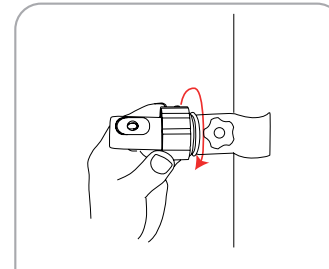

Attach to back wall connector with accessory attached turn ring clockwise to tighten


4

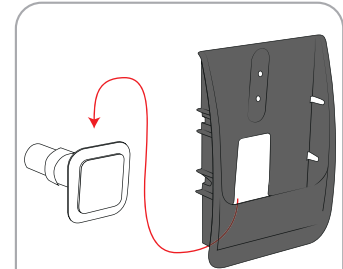

Slide literature pocket onto bracket


5

## Shelf Universal Bracket

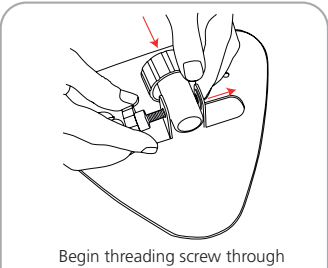


Begin threading screw through literature holder bracket and place accessory connector between holders on bracket

1

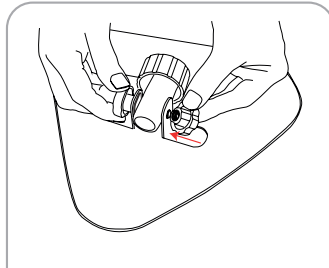


Thread screw all the way through to opposite side

2

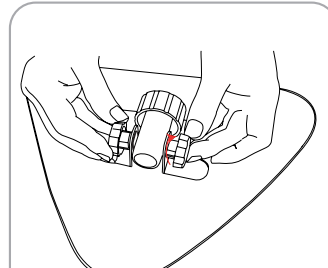


Turn screw cap clockwise to secure

3

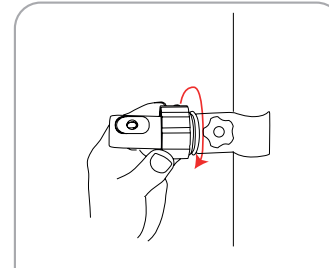

Attach to back wall connector with accessory attached turn ring clockwise to tighten

4

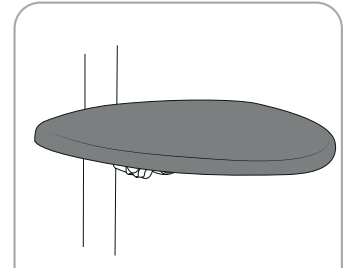

Slide literature pocket onto bracket

5