

SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP RAILS FOLLOWING THE LABELS
- 2. CONNECT SIDE RAILS
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
- 4. CAREFULLY REMOVE FABRIC COVER FROM BAG
- 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
- 6. PULL COVER CAREFULLY UP TO THE TOP
- 7. CLOSE ALL ZIPPERS
- 8. ADJUST FABRIC AROUND THE FRAME
- 9. CONNECT CABLE HARNESS TO THE EYEBOLTS

BREAK DOWN INSTRUCTIONS:


REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

- 1. UNZIP COVER ZIPPERS
- 2. CAREFULLY REMOVE FABRIC COVER
- 3. CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY
- 5. PLACE FABRIC IN COVER BAG


Frame Assembly

Assemble frame as shown

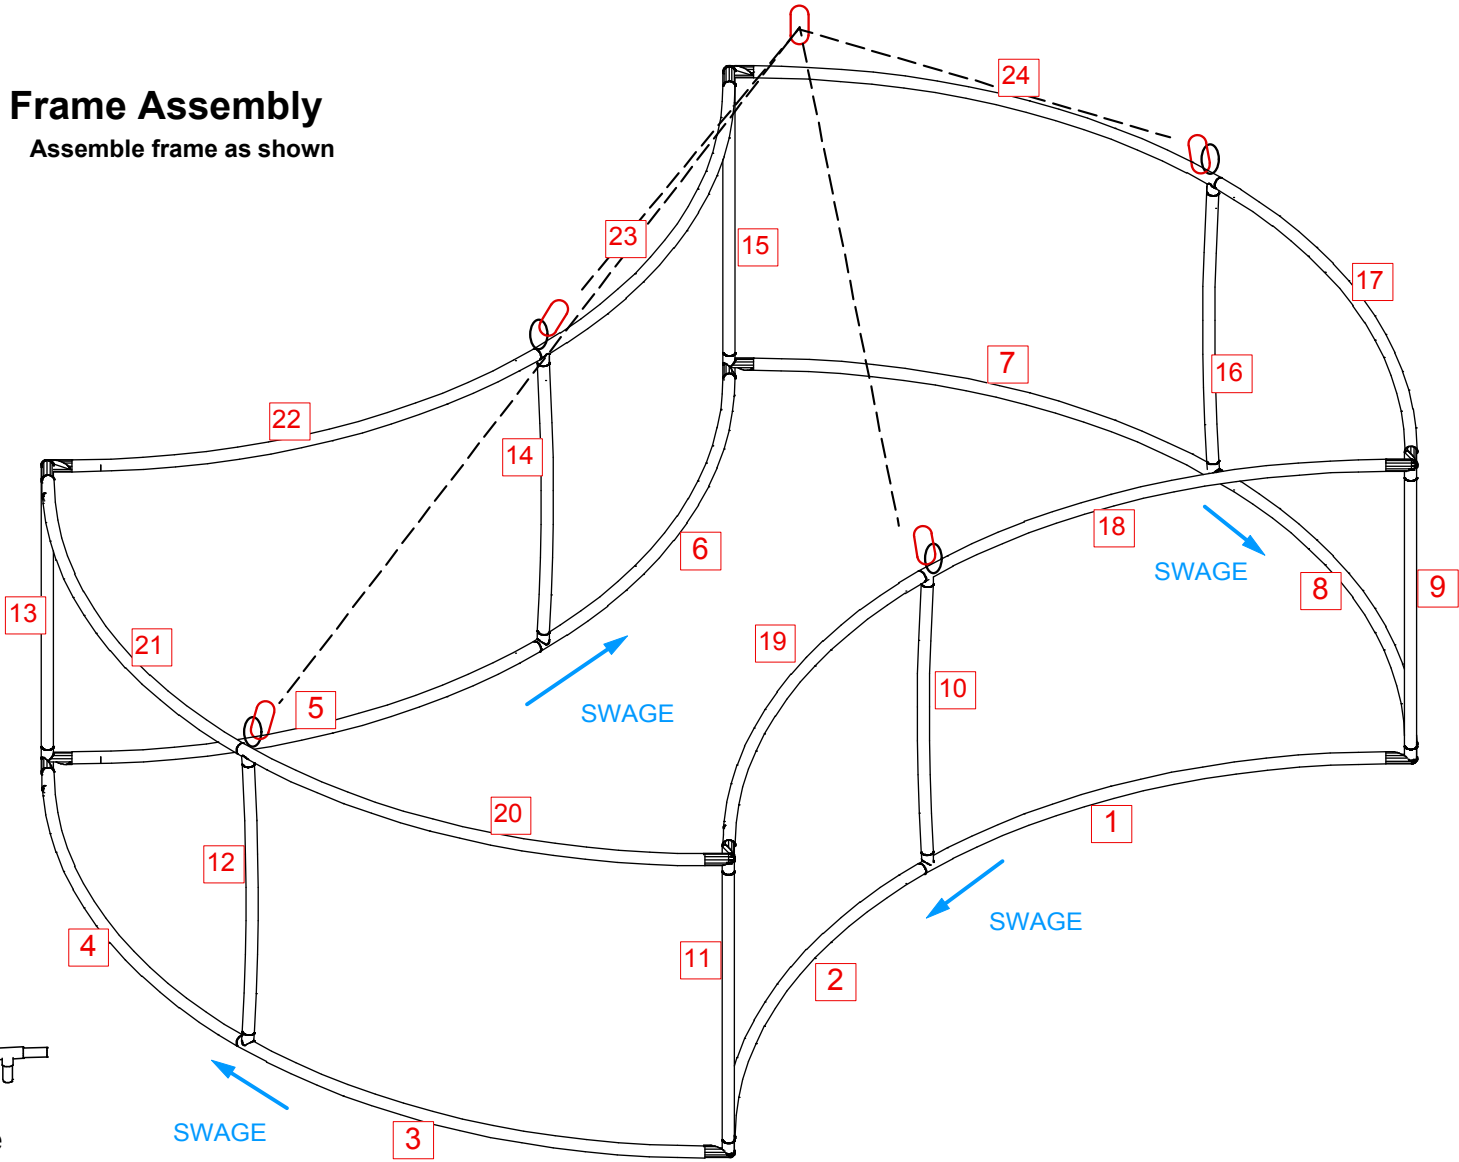

NF17-3

Frame parts

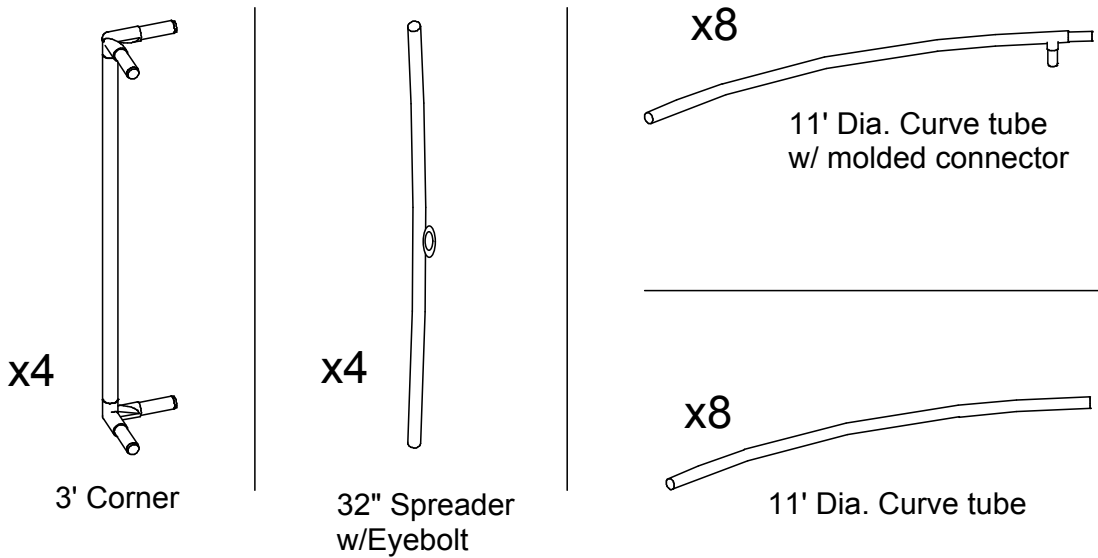

Fabric Cover (Panel A)
GRAPHIC SIZE: 107 1/2" x 36"(V)
Fabric: 4417 (2) Panels
Add a 2" bleed on all sides
PILLOWCASE CONSTRUCTION

Fabric Cover (Panel B)
GRAPHIC SIZE: 105 1/2" x 36"(V)
Fabric: 4417 (2) Panels
Add a 2" bleed on all sides
PILLOWCASE CONSTRUCTION

