

SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP RAILS FOLLOWING THE LABELS
- 2. CONNECT SIDE RAILS
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
- 4. CAREFULLY REMOVE FABRIC COVER FROM BAGS
- 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
- 6. PULL COVER CAREFULLY UP TO THE TOP
- 7. CLOSE ALL ZIPPERS
- 8. ADJUST FABRIC AROUND THE FRAME

BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

- 1. UNZIP COVER ZIPPERS
- 2. CAREFULLY REMOVE FABRIC COVER
- 3. CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY
- 5. PLACE FABRIC IN COVER BAG


PART LIST:

PER UNIT



- 24 30MM DIA. TUBE SECTIONS
- 2 ES-30 EXPANDING SPIGOT
- 1 2.5MM HEX KEY
- 5 5-3/16" THREADED CONNECTOR
- 4 1/4-20 EYE BOLTS
- 5 STEEL WIRE ROPE
- 1 FABRIC COVER

Frame Assembly

Assemble frame as shown

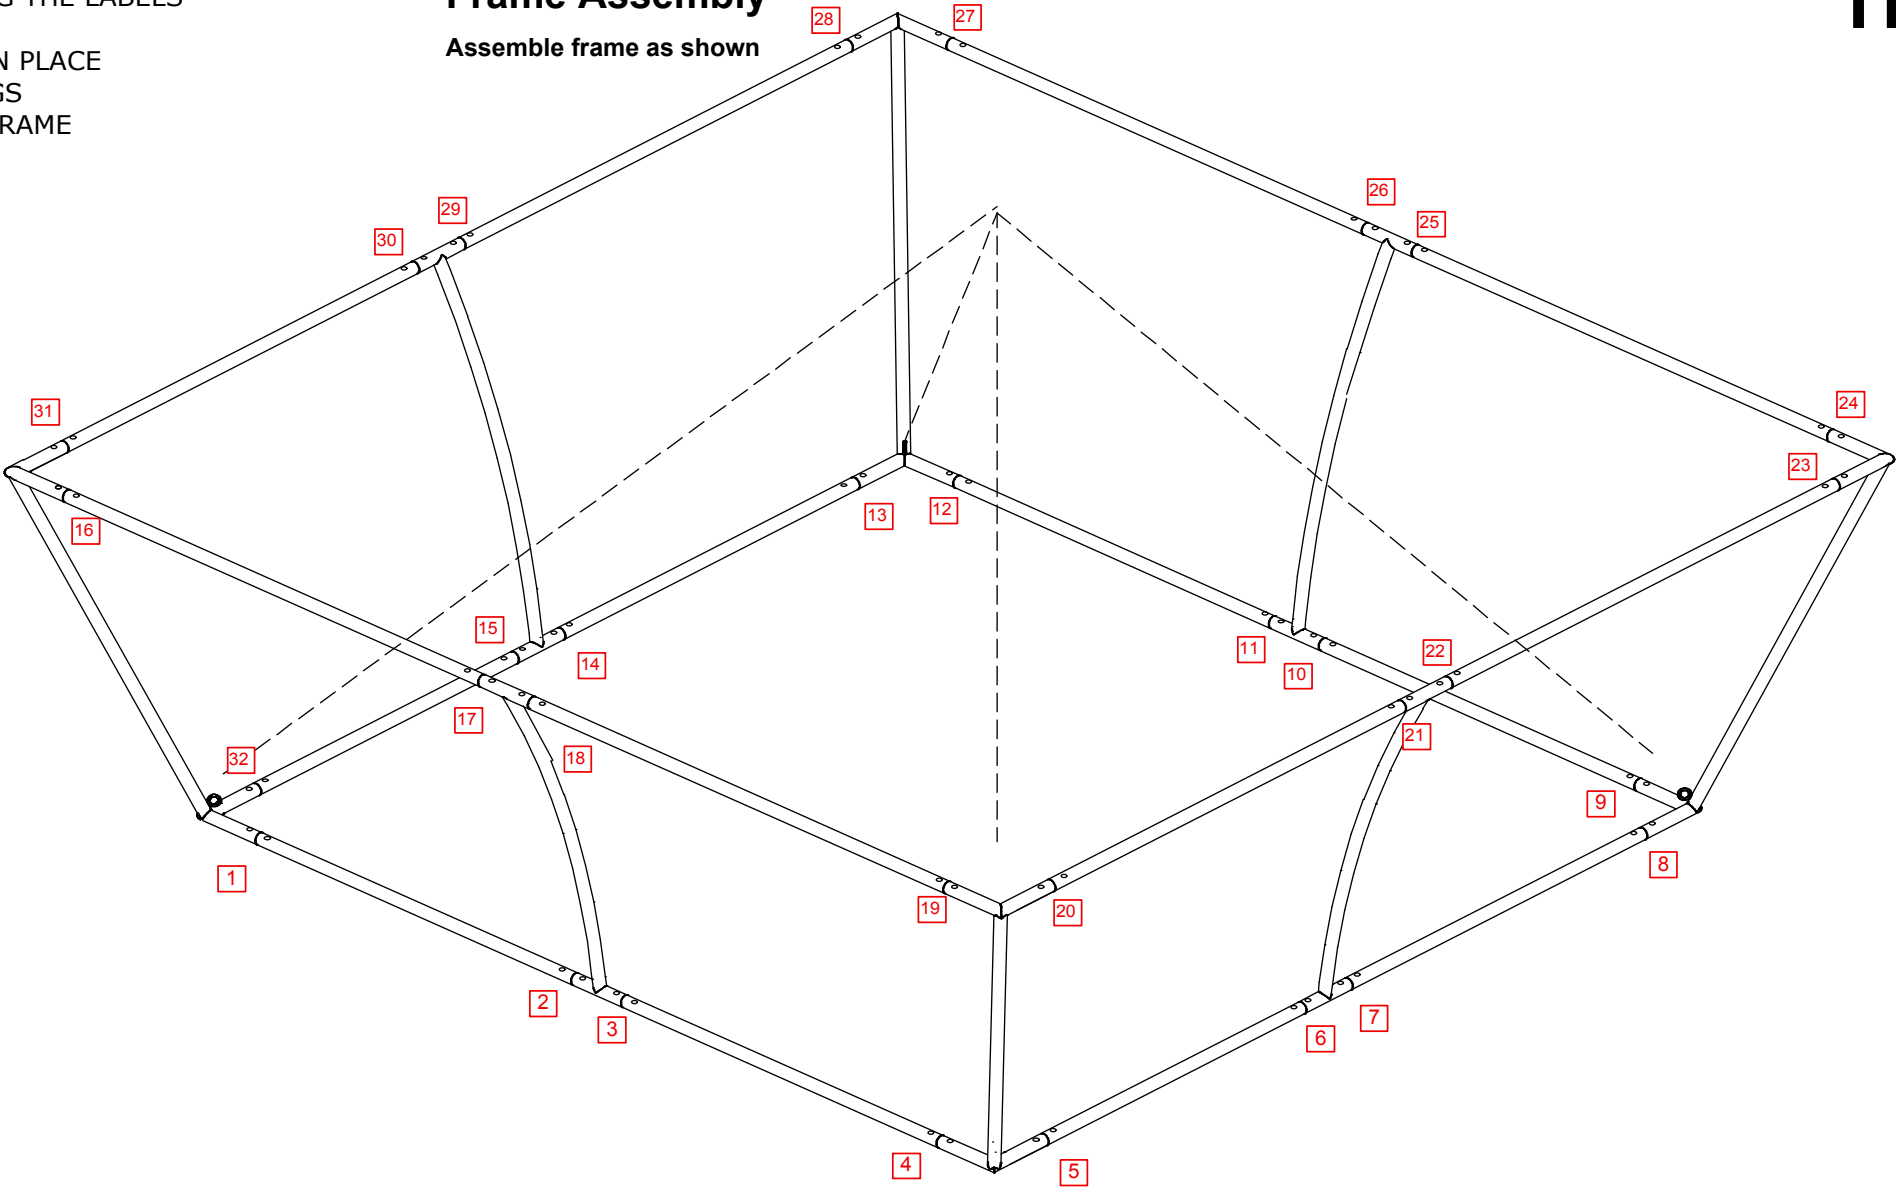

TRTG-1004

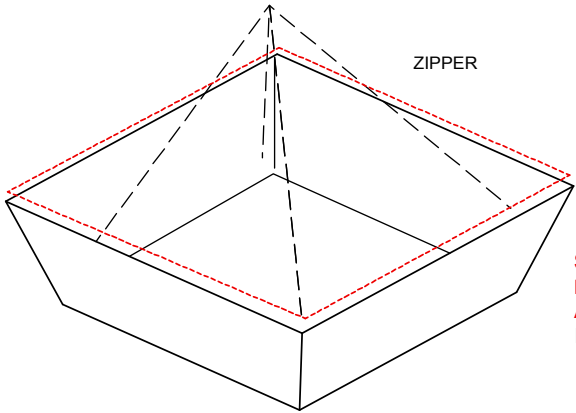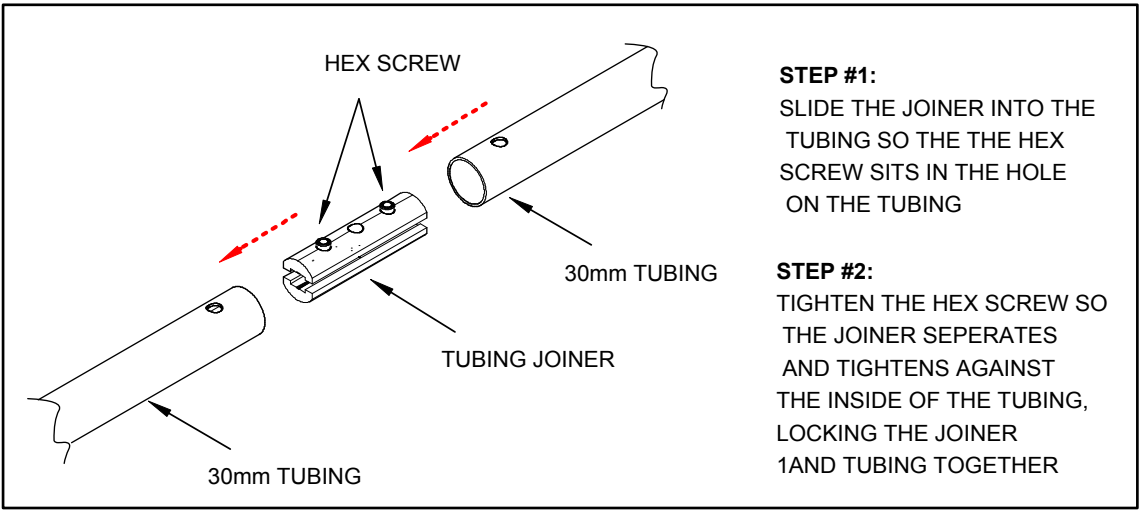

Fabric Cover
SEE EPS TEMPLATE
Fabric: 4417
Add a 2" bleed on all sides
PILLOWCASE CONSTRUCTION