

SET UP INSTRUCTIONS:C

1. CONNECT BOTTOM AND TOP RAILS FOLLOWING THE LABELS
2. CONNECT SIDE RAILS
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAGS
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME

BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER
3. CLOSE ALL ZIPPERS
4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG

PART LIST:


PER UNIT

- |    |                                |
|----|--------------------------------|
| 12 | 30MM DIA. TUBE SECTIONS        |
| 36 | 50MM DIA. TUBE SECTIONS        |
| 24 | ES-30 EXPANDING SPIGOT         |
| 40 | ES-50 EXPANDING SPIGOT         |
| 1  | 2.5MM HEX KEY                  |
| 1  | 5MM HEX KEY                    |
| 16 | THREADED CONNECTOR             |
| 16 | 5/16-18 EYE BOLTS              |
| 8  | 96" X 1/8" DIA STEEL WIRE ROPE |
| 1  | FABRIC COVER                   |

Frame Assembly

Assemble frame as shown

c

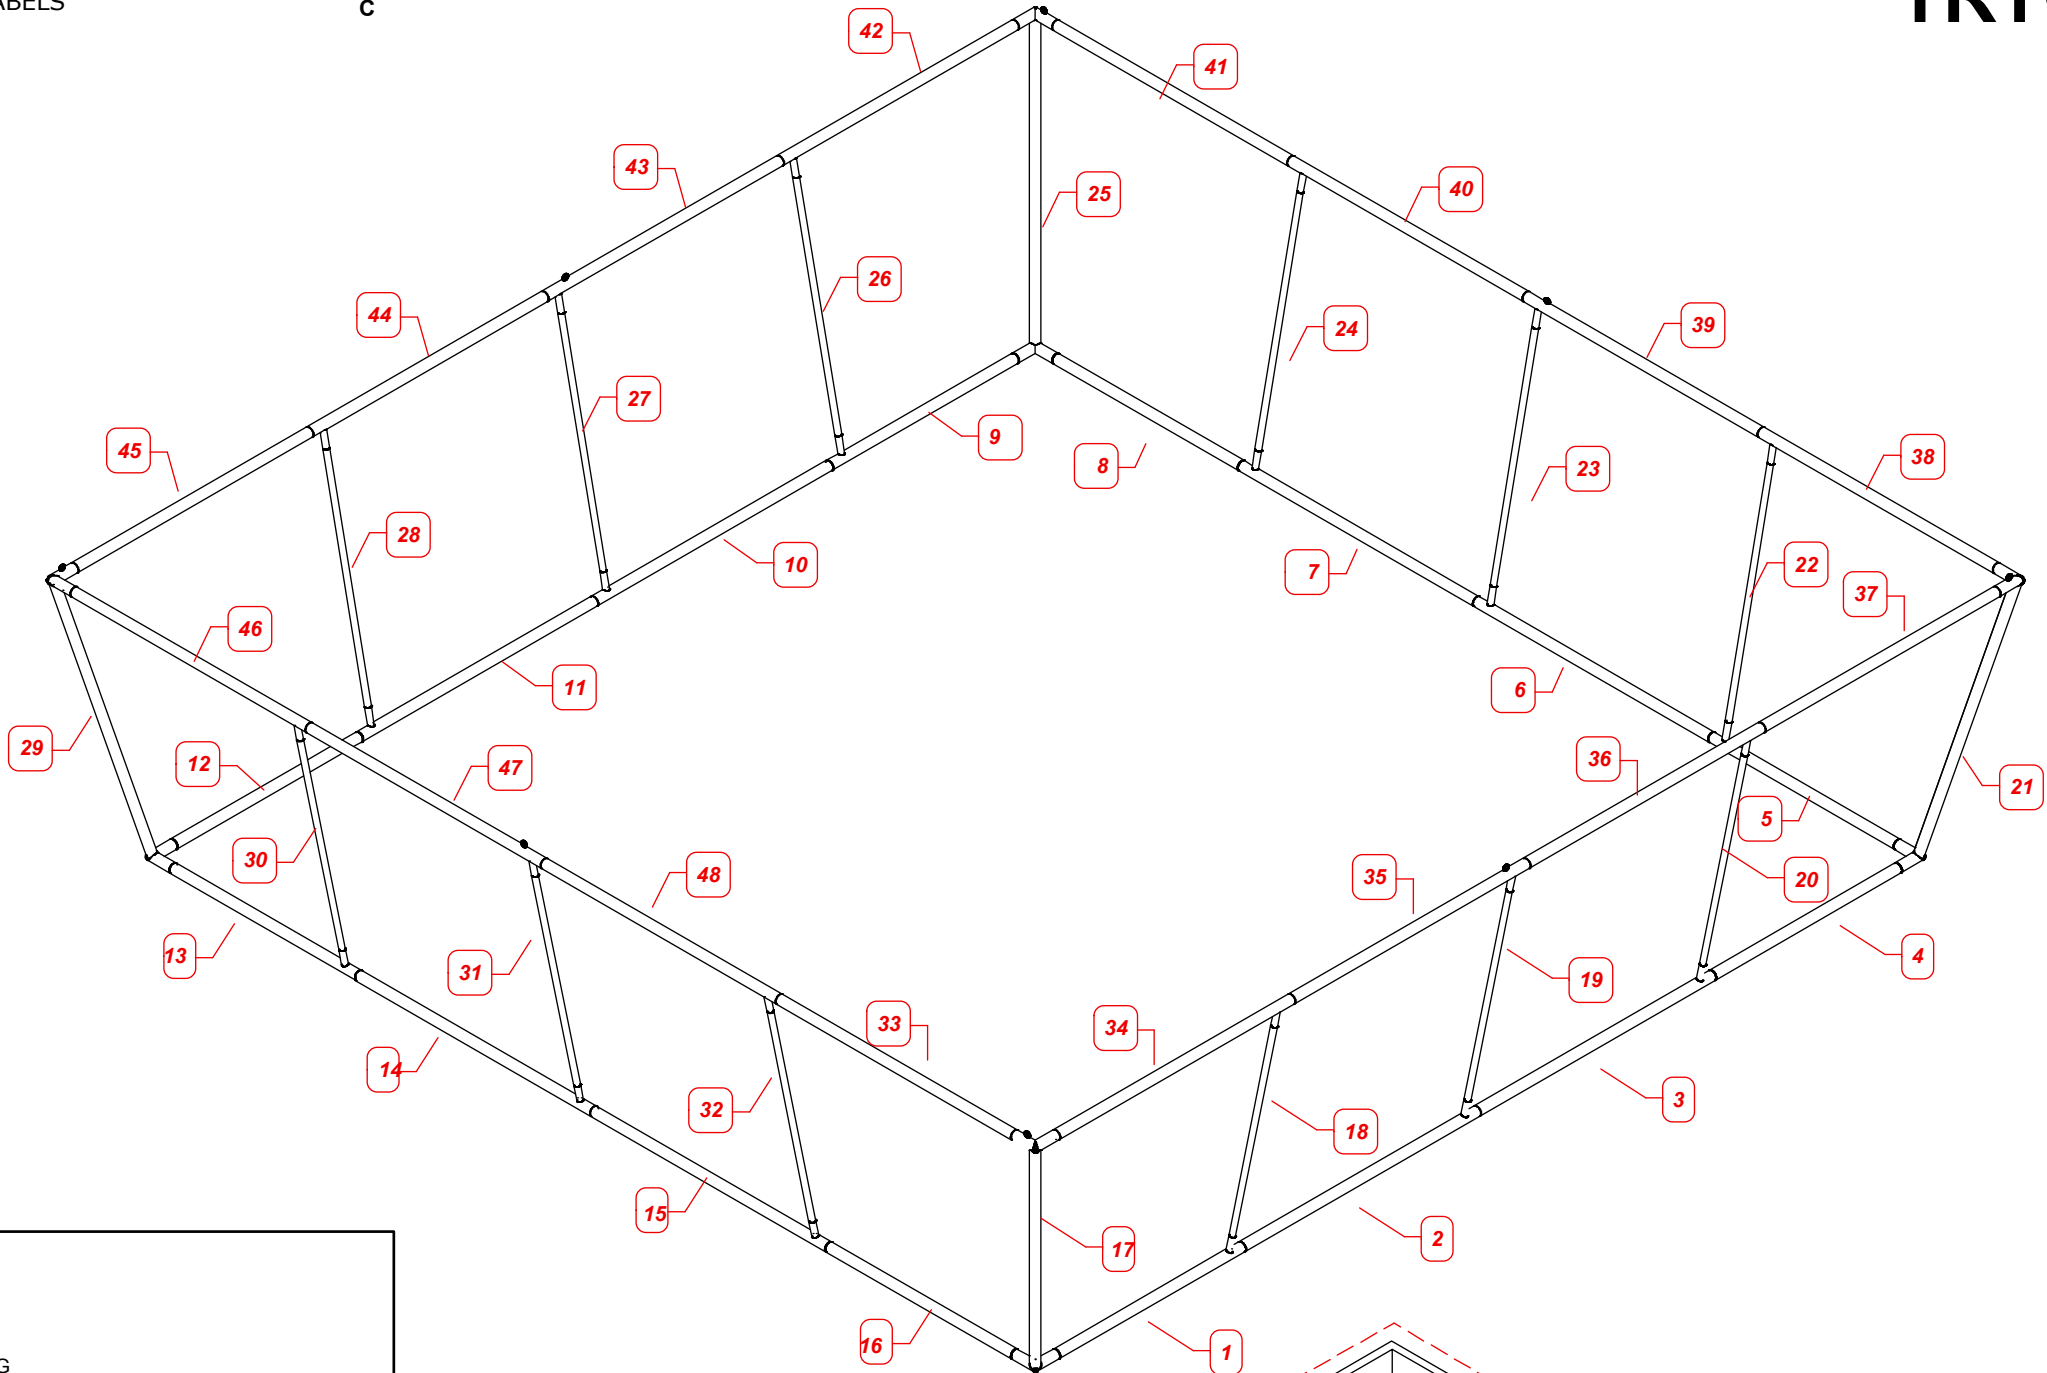

TRTG-2005

STEP 1

SLIDE THE JOINER INTO THE TUBING  
SO THE THE HEX SCREW SITS IN  
THE HOLE ON THE TUBING

STEP 2

TIGHTEN THE HEX SCREW SO THE JOINER  
SEPERATES AND TIGHTENS AGAINST THE  
INSIDE OF THE TUBING, LOCKING THE JOINER  
AND TUBING TOGETHER

